

Arco Basin Mixer

SINGLE LEVER · DECK MOUNTED · BRASS

CL - BB - 001 - ALL FINISHES

BEFORE YOU START

- Minimum **0.5 bar**. Flow 6 – 9 L/min at 3 bar.
- Maximum deck thickness **50 mm**. The fixing is **M32 x 1.5**; the deck cut-out is not stated by the supplier — check the supplied fixing kit against the deck before cutting.
- Connections are G3/8" flexible tails. Fit isolation valves within reach.
- Installation by a qualified plumber. Isolate and flush the supplies before connecting.

IN THE BOX

- Basin mixer, Short body
- Fixing kit: M32 x 1.5 stud, washer and nut
- G3/8" flexible tails
- Base seal

FITTING SEQUENCE

- 01 Check the cut-out.** Offer the base (Ø 54 mm) and the fixing to the basin or deck. Confirm the tails and stud pass freely and that the deck is no thicker than 50 mm.
- 02 Fit the tails.** Screw the flexible tails into the body hand-tight. Do not over-tighten and do not twist the braid.
- 03 Seat the base.** Fit the base seal, pass the tails and stud through the cut-out and set the body square to the basin, spout centred.
- 04 Fix from below.** Fit the washer and M32 nut from beneath and tighten evenly until the body is firm. Check the body has not rotated.
- 05 Connect.** Connect the tails to the isolation valves — hot left, cold right as viewed from the front. Fibre or rubber washers only; no sealant on the tail seats.
- 06 Flush and commission.** Remove the aerator, open the supplies, run hot and cold to clear debris, then refit the aerator and check for leaks under the basin.
- 07 Check the lever.** The lever should move freely through its arc with the mixed position at centre. If stiff, check the fixing has not distorted the base.

CARE

Wipe with a soft damp cloth. No abrasives, no acidic or chlorine-based cleaners on any finish. Unscrew the aerator to descale in hard-water areas.