

Fonte Shower Set

THERMOSTATIC • CONCEALED • STAINLESS STEEL

CL – FIT – SH – 002

MINIMUM PRESSURE 0.5 bar	CONNECTIONS G½	INSTALLATION Concealed • first & second fix	FITTER Competent installer
-----------------------------	-------------------	--	-------------------------------

SEQUENCE

01 FIRST FIX – VALVE BODY

Recess the valve body into the wall. A spirit level is built into the body — set it true before fixing. Flush all pipework before connection.

02 CONNECT

Connect hot and cold supplies to the marked inlets. Run one outlet to the head arm drop, the other to the wall outlet position.

03 CLOSE THE WALL

Pressure-test, then bring the wall to its finished surface before any trim is fitted.

04 SECOND FIX – PLATE & DIALS

Fit the plate and dials. Top dial selects the outlet; bottom dial sets temperature and flow.

05 HEAD & ARM

Fix the wall arm, seal the G½ joint, and fit the head.


06 OUTLET, HOSE & HANDSET

Fit the wall outlet, connect the 1.5 m hose, and seat the handset in the holder.

07 COMMISSION

Run both outlets to temperature. Check the anti-scald stop engages and flow is adequate at each outlet.

REFERENCE DRAWING

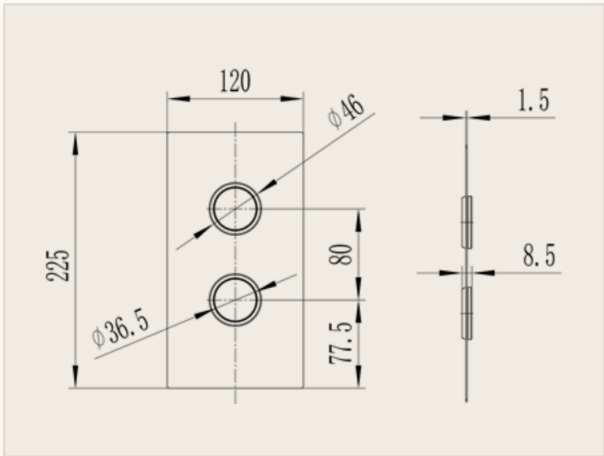

VALVE PLATE • FRONT & SIDE • DIMENSIONS IN MM

NOTE

These steps are general guidance for a competent installer. Where the instruction supplied in the box differs, follow it. Isolate the water supply before starting.

CARE

The handset top unscrews for descaling. Wipe finishes with a soft, damp cloth only — no abrasives, no solvents.